

Bottle Loading



Open Door

Insert Dip Tube

Place Bottle on Base

Close Door

Set-Up Instructions

- Remove the cooler from the shipping box and verify that there is no damage to cooler.
- Ensure cooler is located on a level floor out of direct sunlight.
- Wipe water bottle with a damp cloth and remove label from the No Spill cap. Insert dip tube into bottle.
- Place the bottle on the base and close the door until it is in the locked position.
- Ensure that the hot tank switch on back of unit is in the “Off” position.
- Connect cooler to power source (**do not use an extension cord**). This water cooler is intended to be plugged into a receptacle of the ground fault circuit interrupting type (GFCI).
- The AquaCafé® r has a self-priming feature that takes approximately 5 minutes to fill both the hot and cold tanks. After that time, dispense water from both the hot and cold tanks to confirm that they have filled. Then turn on the hot tank.

Note: The maximum water supply should not exceed 80 psi.

MTN Products, 1770 Brackett Street, La Verne, CA 91750, 909-629-7301

ACB210r-T QSG

Rev: 12/16/2015

MTN Products



AquaCafé® r (Touch with Bottle Water) Quick Start Guide




Button Descriptions



- **Hot Water** - Press the Hot button and hold for 1 second (the unlock indicator ring will light-up red.) Then press the Water Dispense button to dispense hot water.
- **Extra Hot Water for Cooking Instant Noodles and Soups** - Press the **T-cup** button to select the water volume. When the water temperature is low, the Water Dispense light will flash until temperature is reached. When it stops flashing, press and hold the Hot Water button for one second, then press the Dispense button. **(Only available on coffee models.)**
- **Cold Water** - Cold water is the default setting and the unlock indicator ring will always be blue unless hot is selected (then it will be red). If the unlock indicator ring is red, press the cold water button, then press the Water Dispense button. Otherwise, just press the Water Dispense button.
- **Coffee** - Press the **T-cup** button (#6 example on the right) to select coffee volume. Open the lid with the handle, put a-Touch capsule into the holder, and close the lid with the handle. When the water temperature is low, the Water Dispense light (#2) will flash red until the ideal temperature

is reached to brew coffee. When it stops flashing, press the Dispense button (#2) to brew coffee or tea.

- When the water bottle is empty, the No Water indicator light will flash (#1 below). Load a new bottle of water and push the dispense button (#2) to continue operation. The no water indicator light will turn off and stop flashing.
- If the Cold Water light (#4) is flashing, this means the compressor has shut down due to a low water/no water situation for more than 10 minutes.

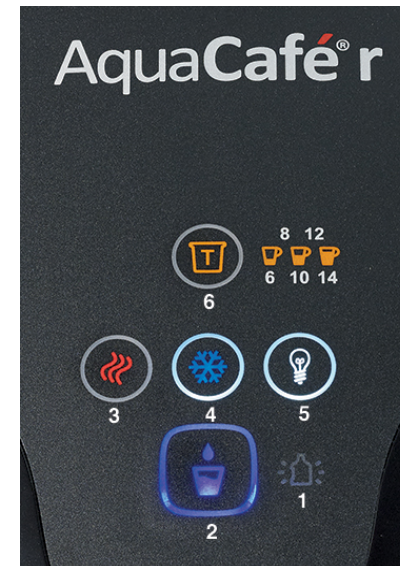

- Load a new bottle of water and push the dispense button (#2) to resume normal operation. The no water indicator light (#1) will turn off. The cold water light will stop flashing when the normal cold water operating temperature is reached.